

FXCQ - | FYC - | FYF - | FXZQ - | FXFQ - | FXKQ - | FXYK - | FXUQ - | FXHQ - | FXYH - | FYL - | FYLM - | FXSQ - | FXYB - | FYM - | FYYS - | FYSP - | FXDQ - | FXMQ - | FXLQ - | FXNQ - | FTX - N | FTXS - K | FTXS - L | FXAQ - | FYA - | CAS - | FXTQ - | FCQ - | FCQGF - F | FHQ - | FLXS - | FAQ - | FBQ - | FXCQ - | FXZQ - | FXFQ - | FXKQ - | FXUQ - | FXHQ - | FXSQ - | FXDQ - | FXMQ - | FXLQ - | FXNQ - | FXAQ - | FFA - | FFQ - | FH(Y)C - | FH(Y)K - | FUY - | FH(Y) - | FHYP - | FH(Y)B - | FMA - | FDBNQ - | FDYB - | FDM - | FAY - | FVYCP - MR | FXCP - | FZFP - | FJFP - | FXFP - | FXFSP - | FJEP - | FREQ - AV36 | FXYHP - | FJSP - | FXSP - | FXNP - | FJDHP - | FXDAP - | FXDSP - | FXYMP - | FYSP - | FJDP - | FXDP - | FXMP - | FJNP - | FYLP - | FYLMP - | FJAP - | FXAP - | FYAP - | FDYQ - | FDYQN - | FDYQT - | FYDYQ - | FDYS - | FFB - | FXDYQ - | FQMQ -

* The asterisks stand for any character in the asterisk' position.

ORDER CODE:

INWMPDAI001R000	Daikin VRV and Sky systems to Home Automation Interface - 1 unit
-----------------	--

INCLUDED COMPONENTS:

Intesis Gateway,
Installation Manual.

Warranty: 36 months.