

LAC | AGHG - LV | AGHG - LVCA | AGHG - LVCB | ABHF24LB | ABHG - LVTB | ABGA - LATF | ABHA - GATH | ABHA - LBTH | ABGG - LRTA-A | ABGG - LVTA | ABGG - LVTA-A | ABHA - LB | ABHA - LBT | ABHA45LC | ABHA - LCT | ABHF - LBT | ABHG - LR | ABHG - LRTA | ABHG - LRTE | ABHG - LVTA | AWGA - LATF | ASHA - LEC | ASHA - LKC | ASHG - LE | ASHG14LE | ASHG - LECA | ASHG14LECA | ASHG - LECB | ASHG - LJ | ASHG - LMCA | ASHG - LT | ASHG - LTCA | ASHG - LTCB | ASHG - LUCA | ASHG - LJCA

HIYASU AC models

HSA - LKC | HSB - LDC | HSG - LECA | HSG - LJCA | HSG - LFCA | HSG - LFCC | HSG - LMCA | HSG - LTCA | HSG - LUCA | ACH - H UIA-LH | ACH - H UIAT-LH | ACH - UIA-LL | ACH - UIA-LM | ACH - UIAT-LM | HR - UA | HRA - LALU | HRA - LATN | HRA - LATU | HRA - LBTU | HRA - LCTU | HRC - LCTU | HRF - LALU | HRF - LBLU | HRF - LBTU | HRG - LHTA | HRG - LLTA | HRG - LLTB | AUH - UIA-LR | AUH - UIAT-LR | AUH - UIA-LV | HU - UA | HUA - LATN | HUA - LATU | HUA - LBLU | HUA - LCLU | HUF - LAL | HUF - LBL | HUG - LVLA | HUG - LVLB | HUG - LHLE | HUG - LHLA | ABH - UIA-LR | ABH - UIAT-LR | ABH - UIA-LV | HGF - LAC | HGG - LVCA | HGG - LVCB | HBA - LBT | HBA - LCT | HBF - LBT | HBFF - LBT | HBG - LRTA | HBG - LRTE | HBG - LVTA | HBG - LVTB | HSA - LKC | HSG - LECA | HSG14LECA | HSG - LJCA | HSG - LMCA | HSG - LTCA | HSG - LUCA

* The asterisks stand for any character in the asterisk' position.

ORDERE CODE:

INMBSFGL001R000	Fujitsu RAC and VRF systems to Modbus RTU Interface (to remote controller) - 1 unit
-----------------	---

INCLUDED COMPONENTS:

- Intesis Gateway.
- Installation Manual.

Warranty: 36 months.